

- 1) NOT TO SCALE. DO NOT USE AS A DOOR TEMPLATE.
- 2) REFER TO DP-156 FOR STRIKE PREPARATION GUIDE.
- 3) SLIGHT MODIFICATION MAY BE NECESSARY FOR PROPER FIT.
- 4) SHOWN, RIGHT HAND DOOR PREP.

M573 COMM-PASS MORTISE, SM TRIM
FOR COMMUNICATING LOCK WITH DEADBOLT, WITH
TRIM INSIDE ONLY (RIGHT HAND SHOWN)



TOLERANCES UNLESS OTHERWISE SPECIFIED:
X.X (METRIC)= ± 0.5
X.XX(METRIC)= ± 0.15
0.00"(UNIFIED)= $\pm .015$ "
0.000"(UNIFIED)= $\pm .005$ "

DP-309


JWB

08-02-18

Rev.:

	D
--	---

--NOT TO SCALE--
DO NOT USE AS A DOOR TEMPLATE

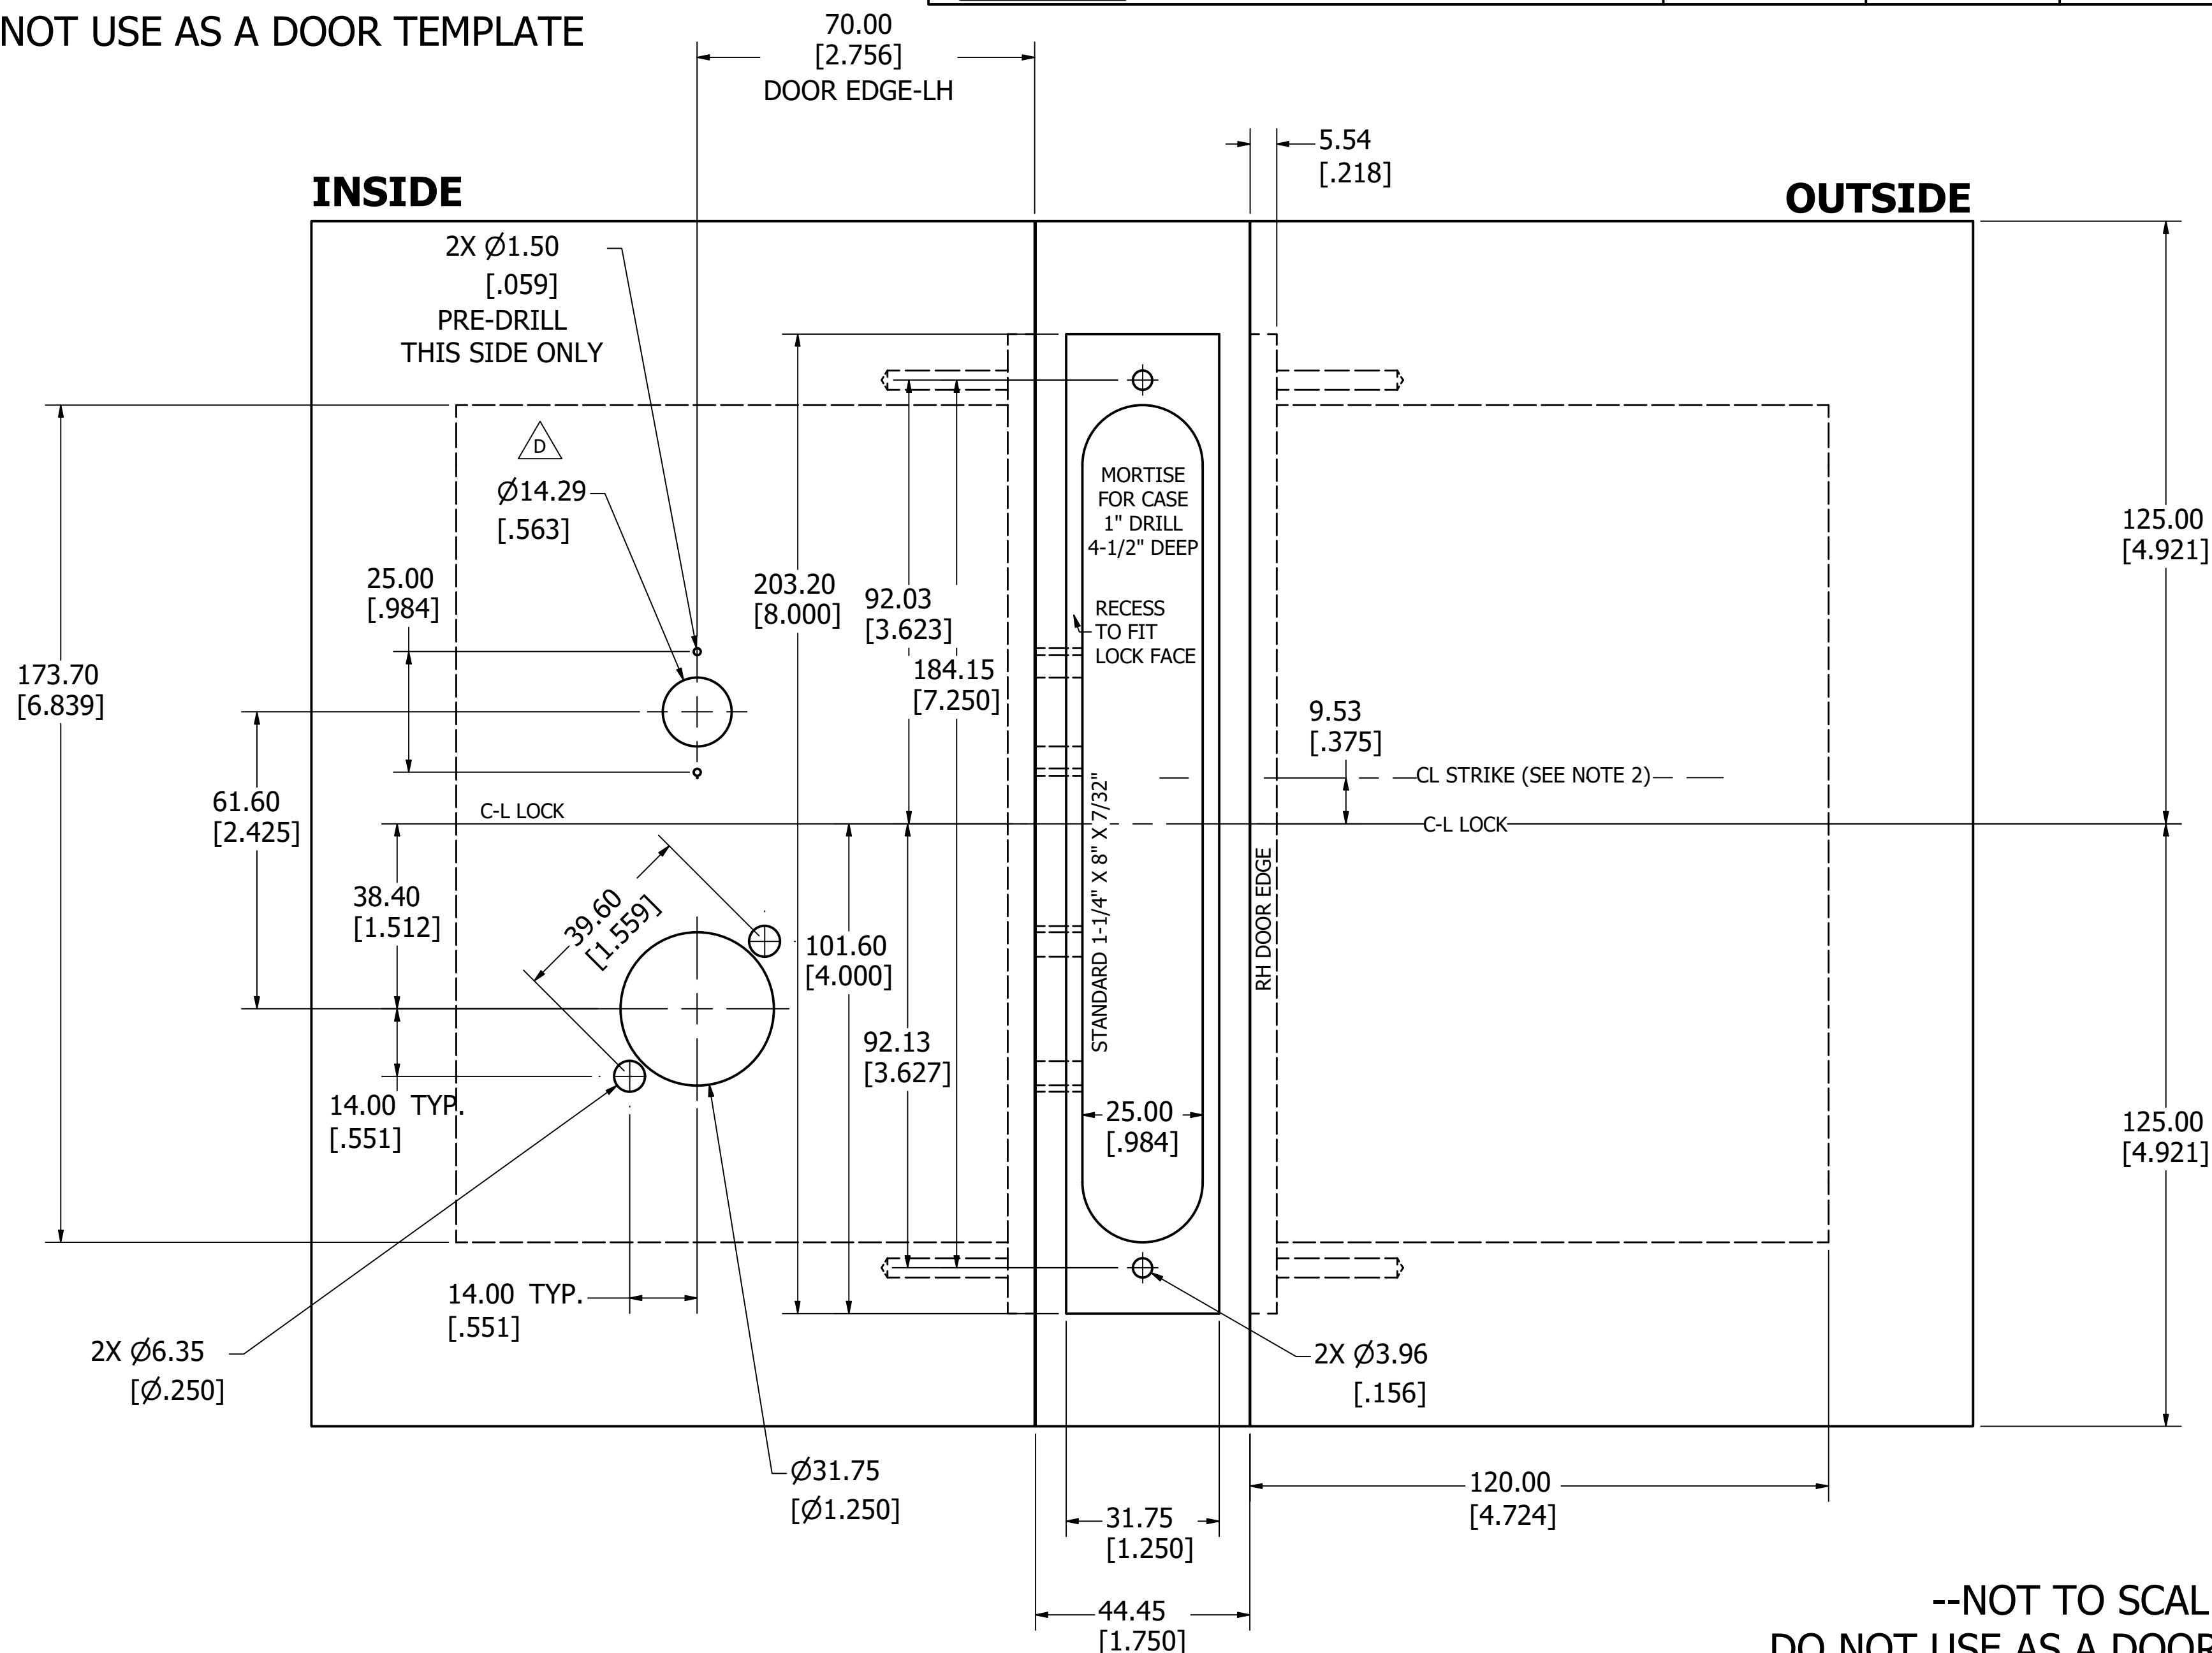

--NOT TO SCALE--
DO NOT USE AS A DOOR TEMPLATE