

- NOTES:
- 1) ALIGNMENT OF THE 8mm SPINDLE IS CRITICAL. MAKE SURE IT IS SQUARE TO THE EDGE OF THE DOOR, THEN MARK FOR HOLES.
 - 2) DRILL HOLES TO THE CORRECT DRILL DIAMETER DEPENDING ON FASTENER SIZE.
 - 3) DIMENSIONS: MILLIMETERS ON TOP, [INCHES IN BRACKETS].
 - 4) NOT FULL SCALE--DO NOT USE AS A PAPER TEMPLATE TO PREP DOOR.

Description:
T600 DUMMY PLATE, DOOR PREP


TOLERANCES UNLESS OTHERWISE SPECIFIED:
X.X (METRIC) = ±0.5
X.XX (METRIC) = ±0.15
0.00" (UNIFIED) = ±.015"
0.000" (UNIFIED) = ±.005"

Drawing No:
DP-354

Drawn By:
JWB

Orig. Date
12-03-21

Rev. Date: Rev.:

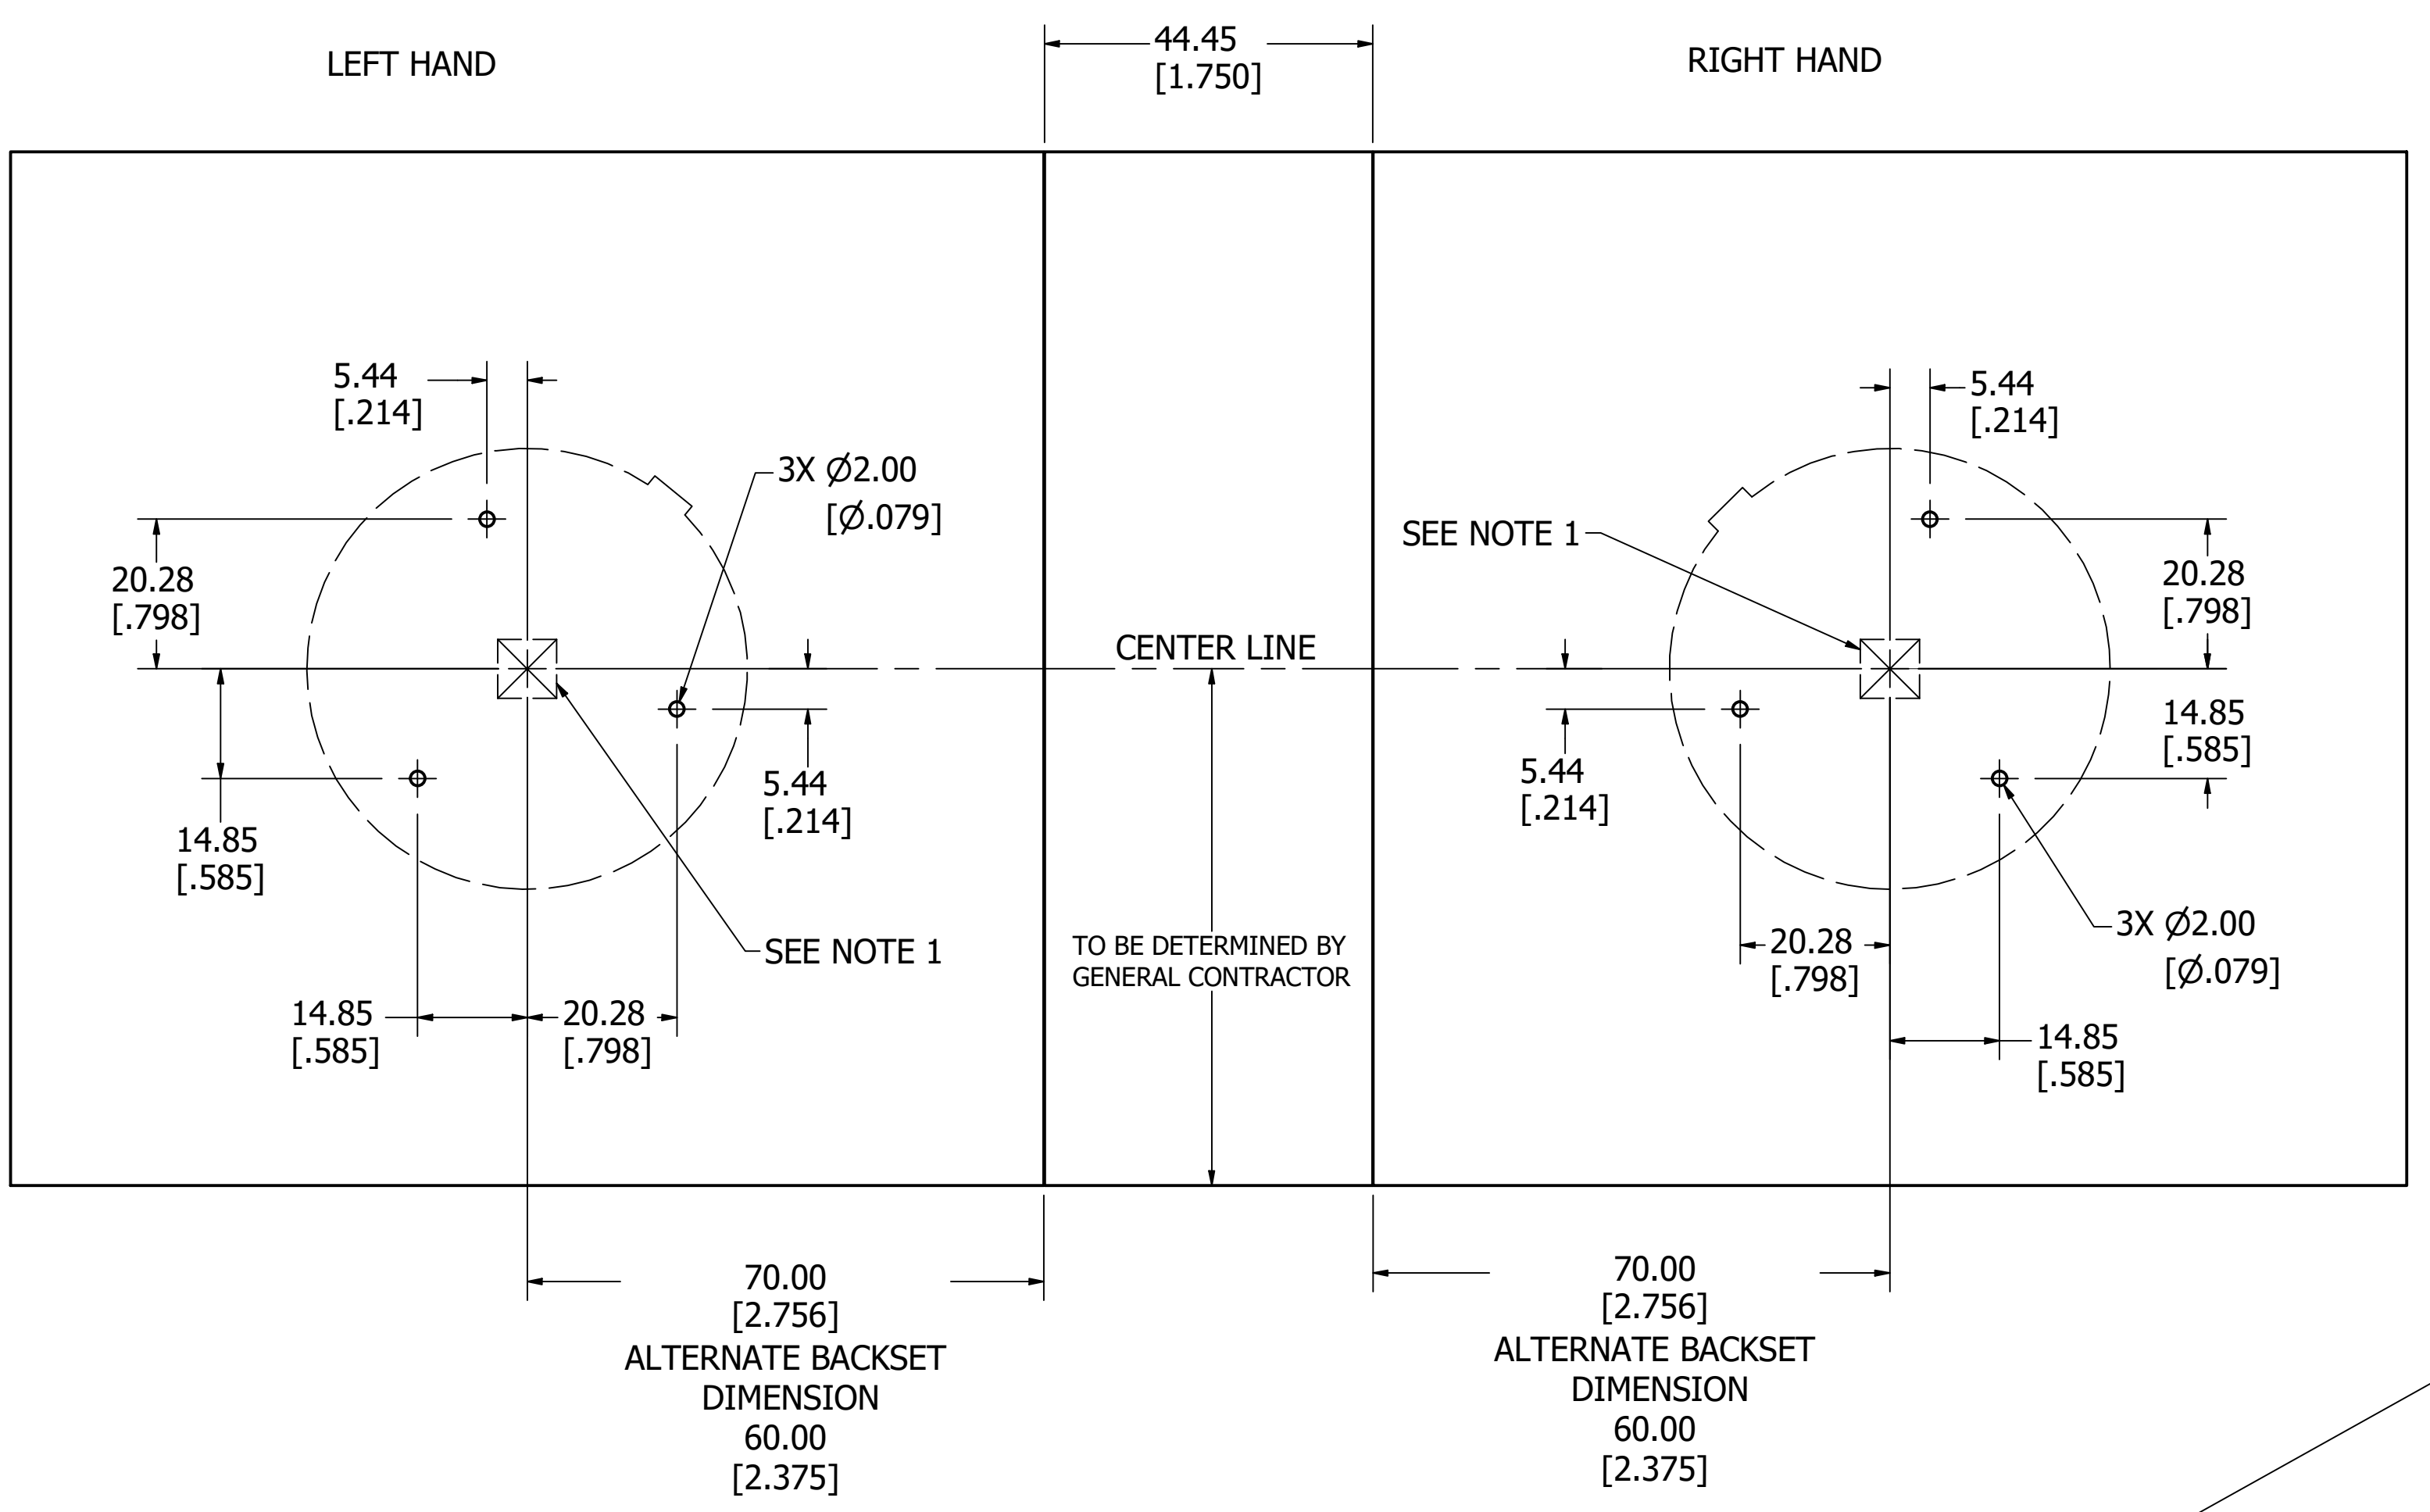


1903 ROSE

NOT FULL SCALE

NOT FULL SCALE

1905/1912/1912Q ROSE

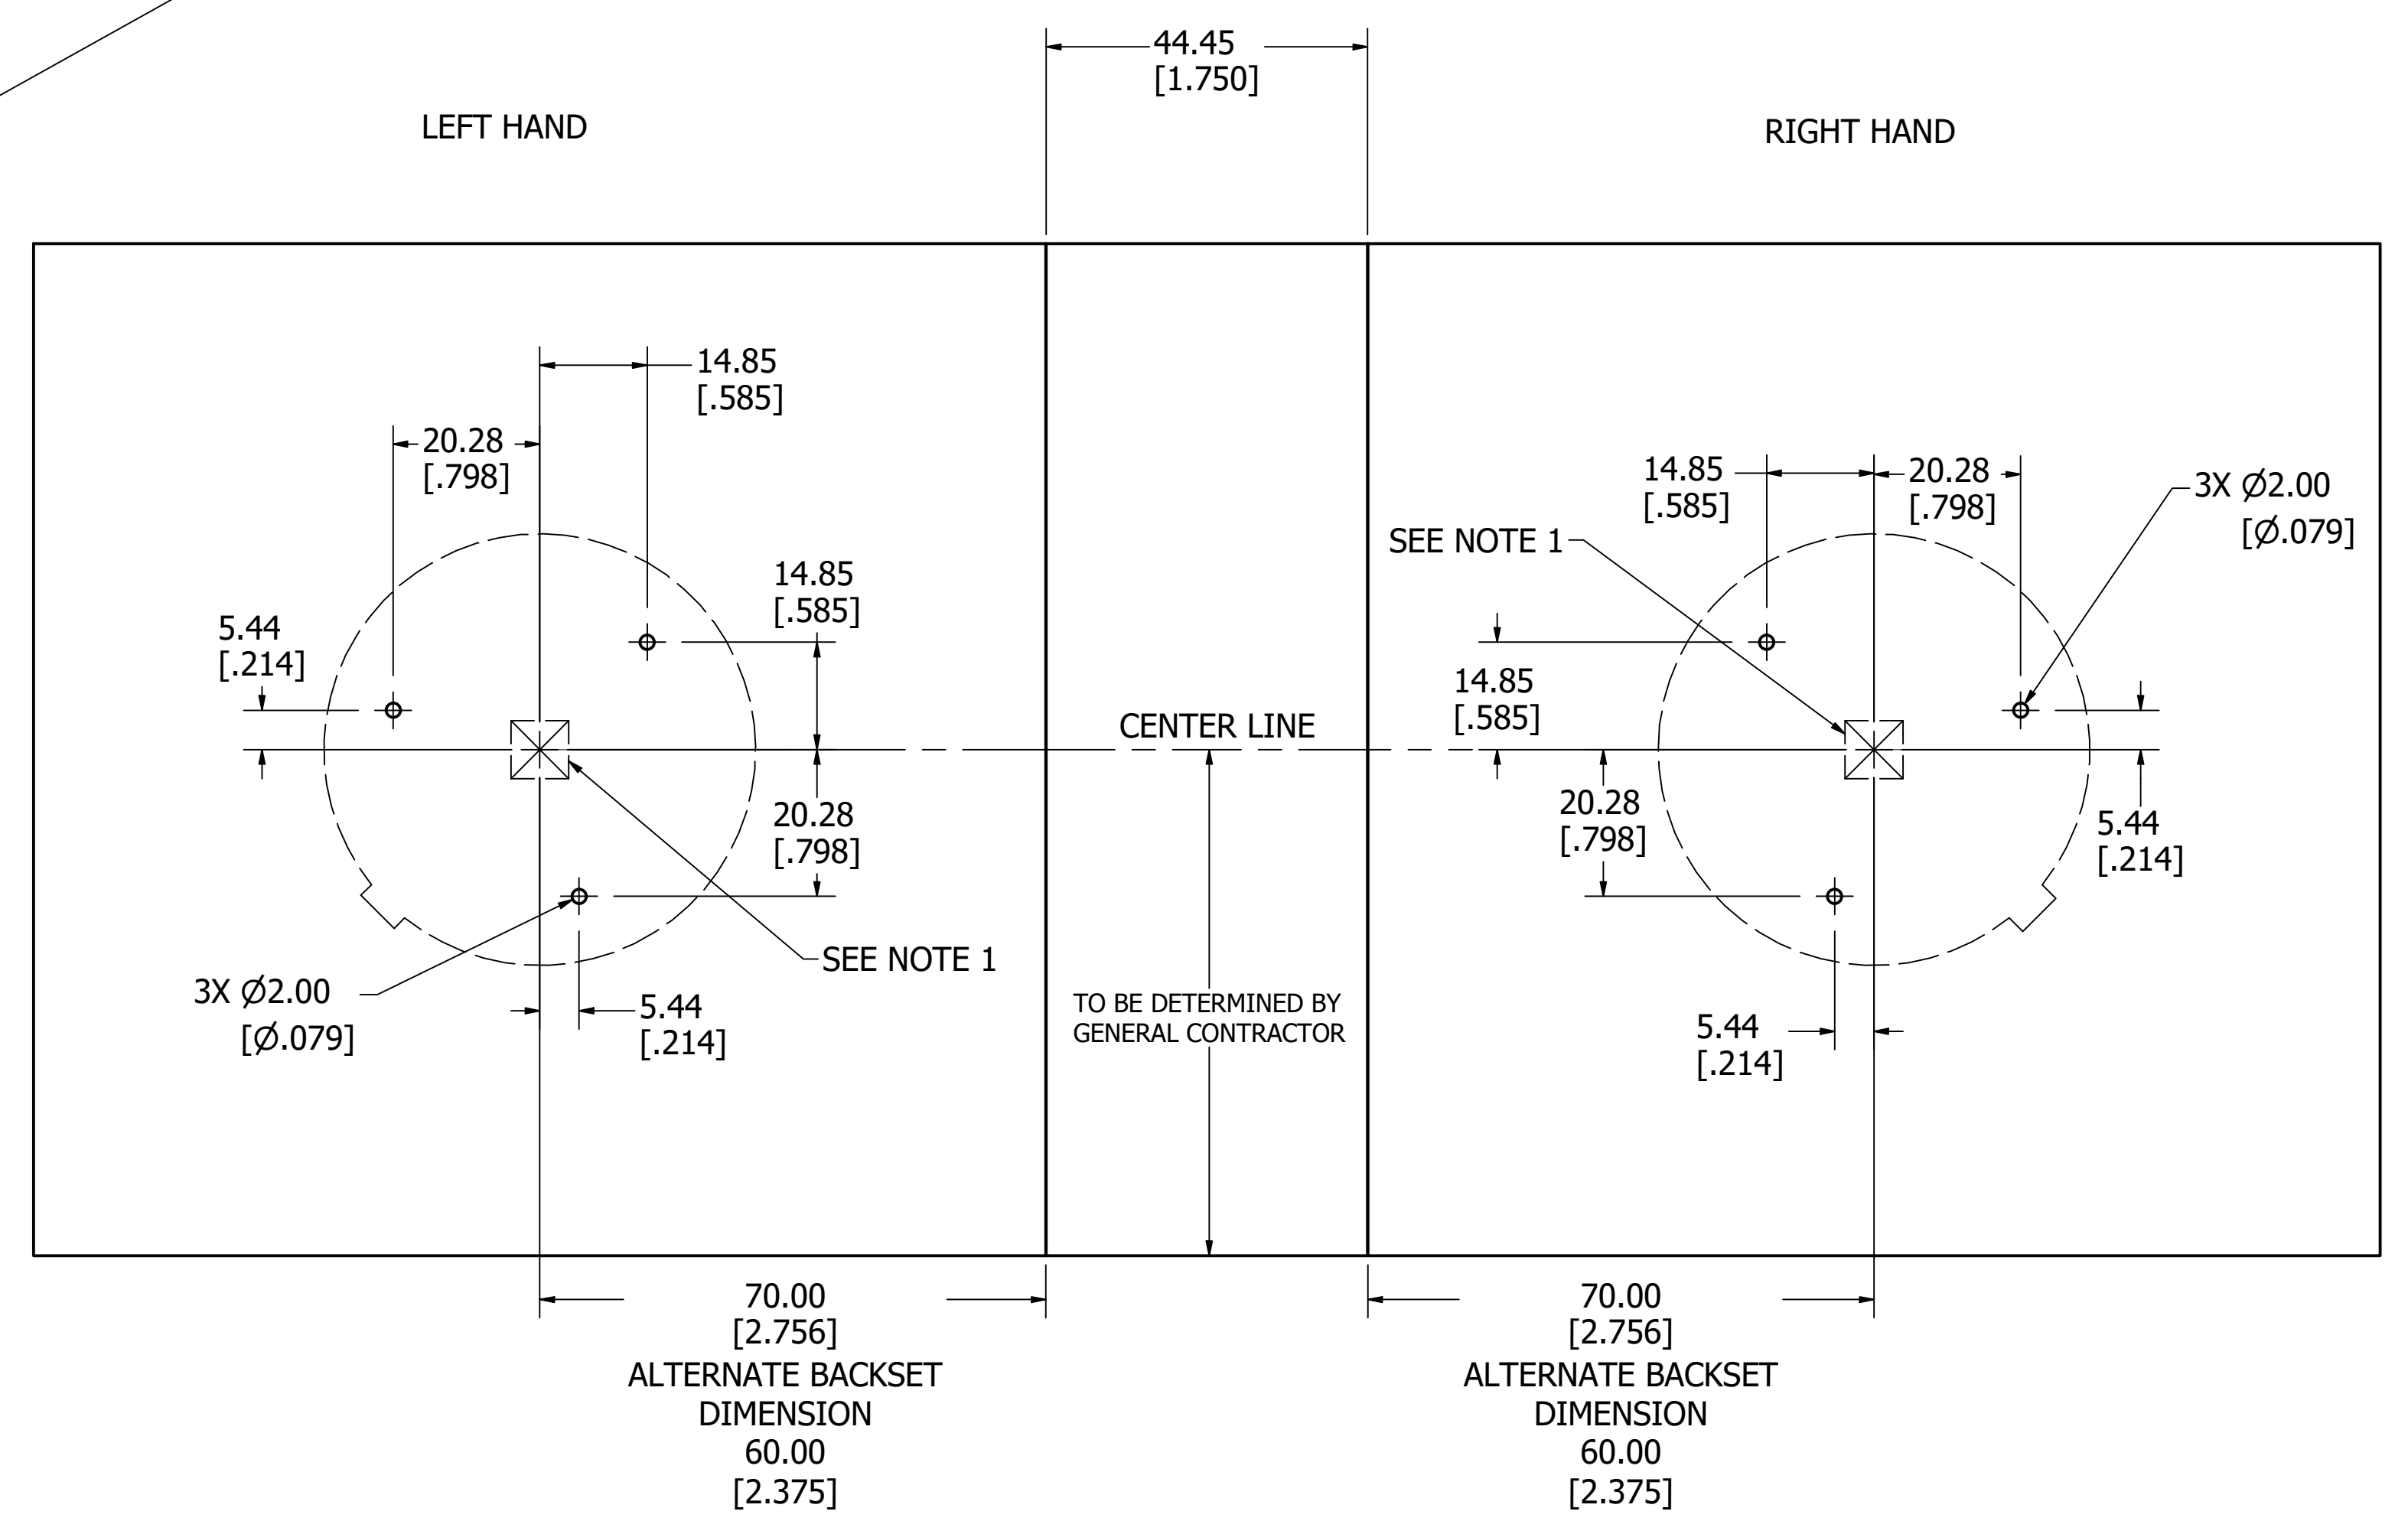

NOT FULL SCALE

NOT FULL SCALE

8 7 6 5 4 3 2 1