


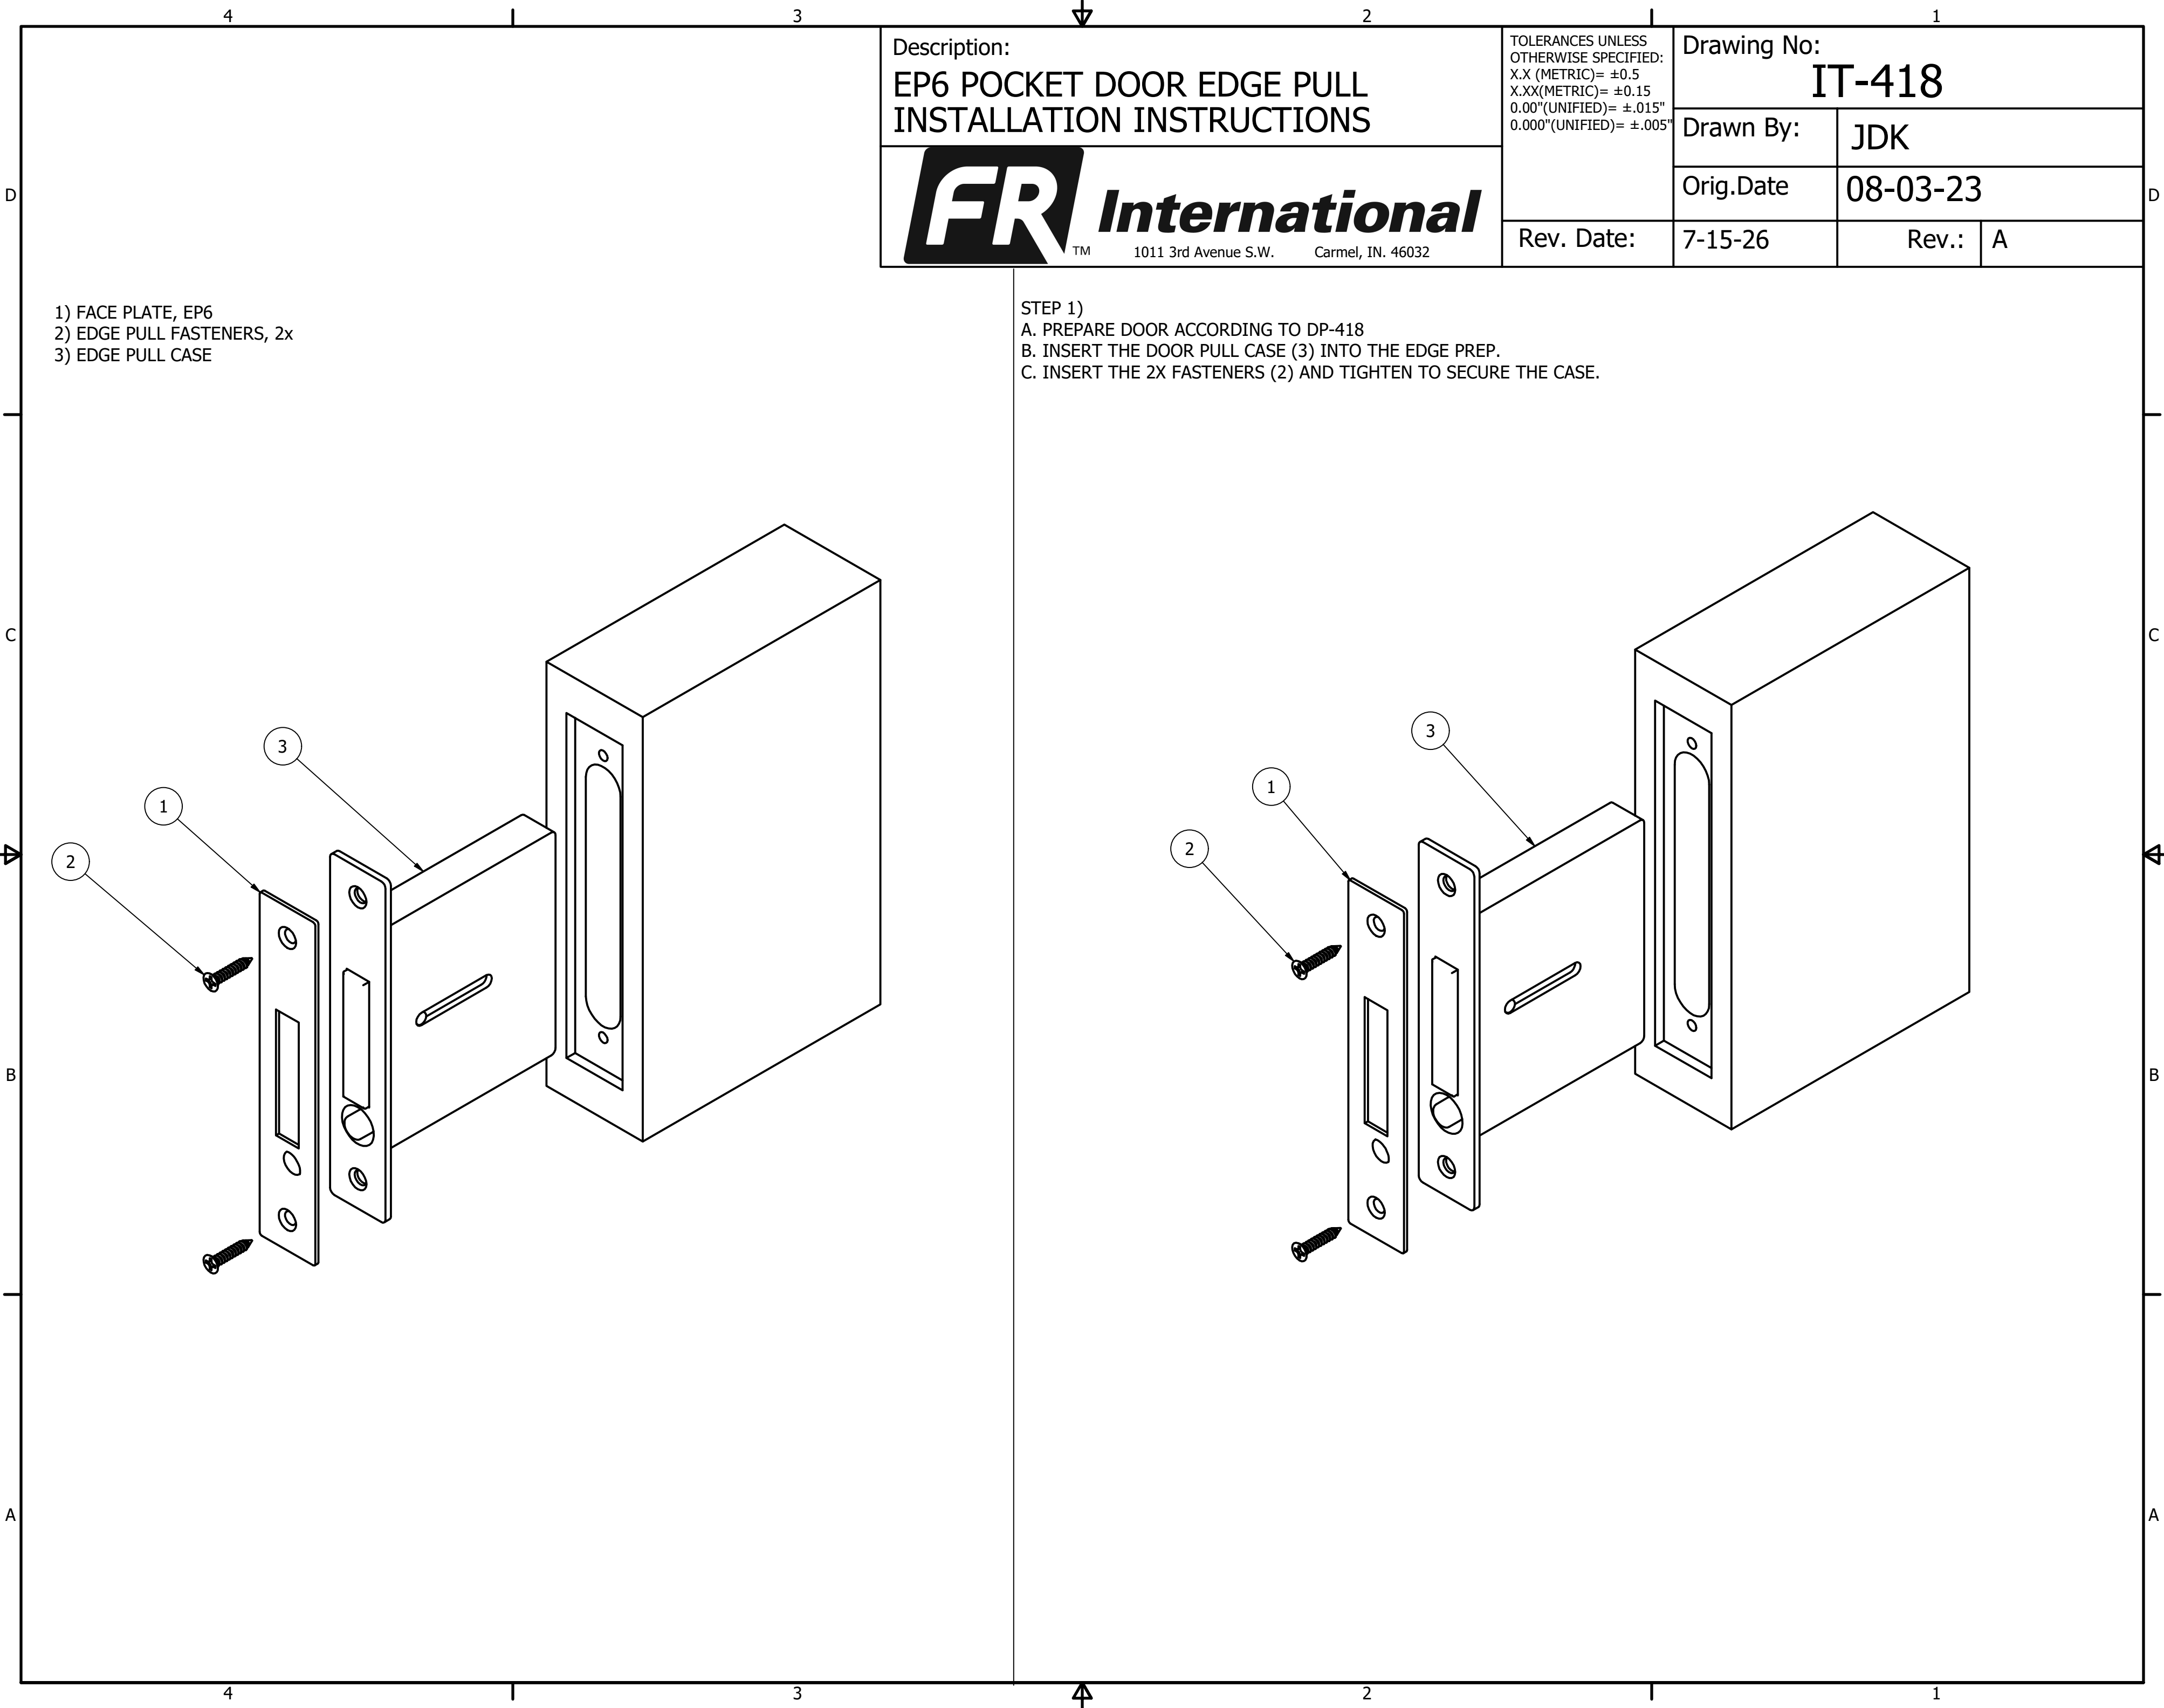

Description:
EP6 POCKET DOOR EDGE PULL
INSTALLATION INSTRUCTIONS

**FR** *International*
™ 1011 3rd Avenue S.W. Carmel, IN. 46032

TOLERANCES UNLESS OTHERWISE SPECIFIED: X.X (METRIC)= ±0.5 X.XX(METRIC)= ±0.15 0.00"(UNIFIED)= ±.015" 0.000"(UNIFIED)= ±.005"				Drawing No: IT-418	
		Drawn By:		JDK	
		Orig.Date		08-03-23	
Rev. Date:		7-15-26	Rev.:	A	

- 1) FACE PLATE, EP6
- 2) EDGE PULL FASTENERS, 2x
- 3) EDGE PULL CASE

- STEP 1)
A. PREPARE DOOR ACCORDING TO DP-418
B. INSERT THE DOOR PULL CASE (3) INTO THE EDGE PREP.
C. INSERT THE 2X FASTENERS (2) AND TIGHTEN TO SECURE THE CASE.