



CAREFULLY READ THE INSTRUCTIONS BEFORE INSTALLING

- A)** MORTISE STRIKE KIT COMPONENTS
- B)** MORTISE LOCK
- C)** FACEPLATE
- D)** OUTSIDE TRIM SUB-ASSEMBLY
- E)** FACEPLATE SCREWS, 2x
- F)** 1919 BACKPLATE, INSIDE
- G)** BACKPLATE MOUNTING SCREWS, 2x
- H)** LEVER SET SCREWS, 2x
- I)** INSIDE TRIM SUB-ASSEMBLY
- J)** SPINDLE, 2x
- K)** HEX WRENCH
- L)** TURN KNOB, ROSETTE SUB-ASSY.
- M)** UL FIRE DOOR GUARD
- N)** MOUNTING SCREWS, MORTISE, 2x
- O)** THREADED BASE, TURN KNOB
- P)** FASTENERS, THREADED BASE, 2x

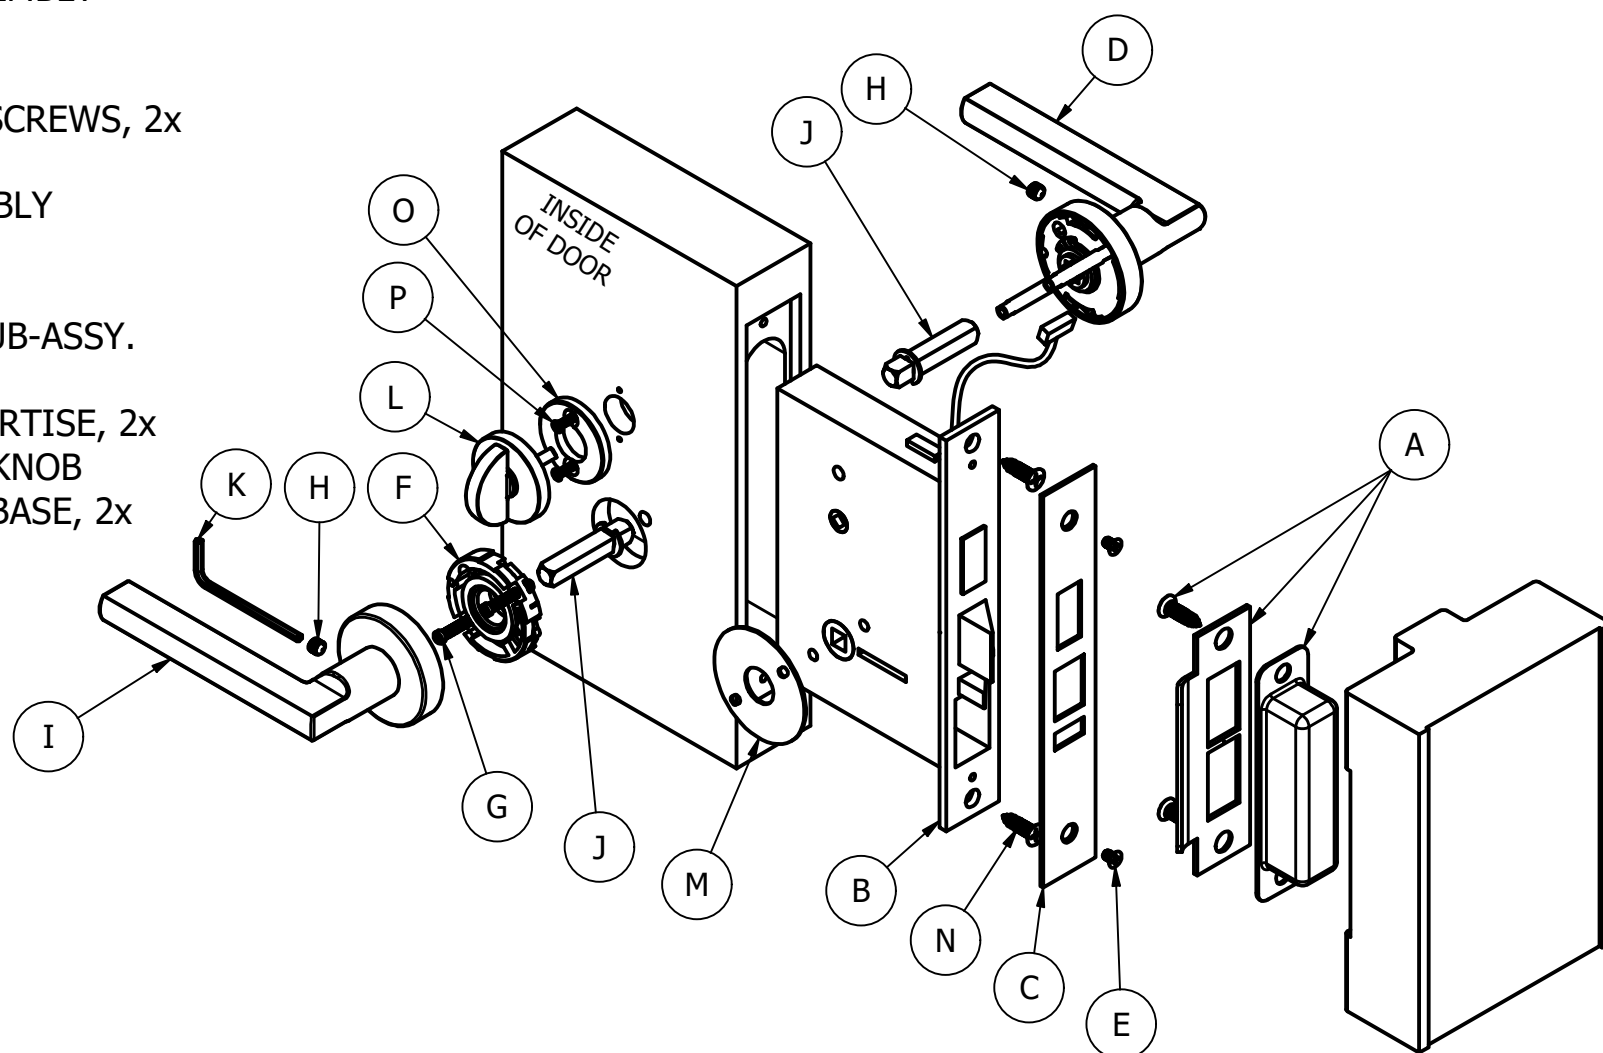


STEP 1)

- A. FOR "SM" TRIM, PREP DOOR ACCORDING TO DP-447. FOR MORTISE CASE AND LOCK CONTROLLER, REFER TO DORMA KABA WEBSITE FOR ALL OTHER INFORMATION.
- B. REMOVE THE ADHESIVE BACKING FROM THE U.L. FIRE DOOR GUARD (M) THEN CAREFULLY ALIGN AND ADHERE THE PLATE ONTO THE INSIDE OF THE LOCK CASE WITH THE HOLES ALIGNED AS SHOWN.
- C. REFER TO DORMA KABA "PIXEL" PK3693-T(2019) OR "PIXEL +" T95524 INSTALLATION DIAGRAM FOR POWER PACK/PROXIMITY READER INSTALLATION.
- D. INSERT THE LOCK CASE (B) INTO THE MORTISE CAVITY AND LOOSELY FASTEN INPLACE WITH THE PROVIDED SCREWS (N). DO NOT FULLY TIGHTEN UNTIL STEP 6.

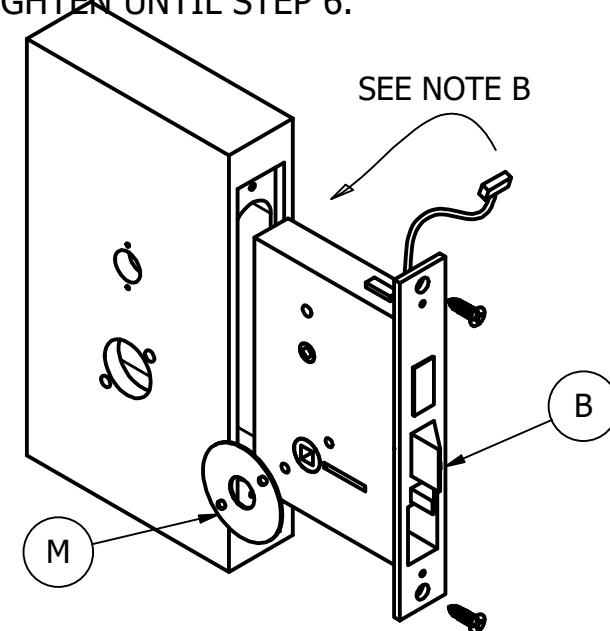


STEP 2)

- A. FROM THE OUTSIDE OF THE DOOR INSERT ONE OF THE SPINDLES (J) INTO THE SPINDLE HUB OF THE LOCK CASE.
- B. INSERT THE OUTSIDE TRIM SUB-ASSY (D) OVER THE SPINDLE, ALIGNING THE POSTS WITH THE HOLES OF THE PREPARED DOOR. PUSH TRIM AGAINST DOOR FACE.

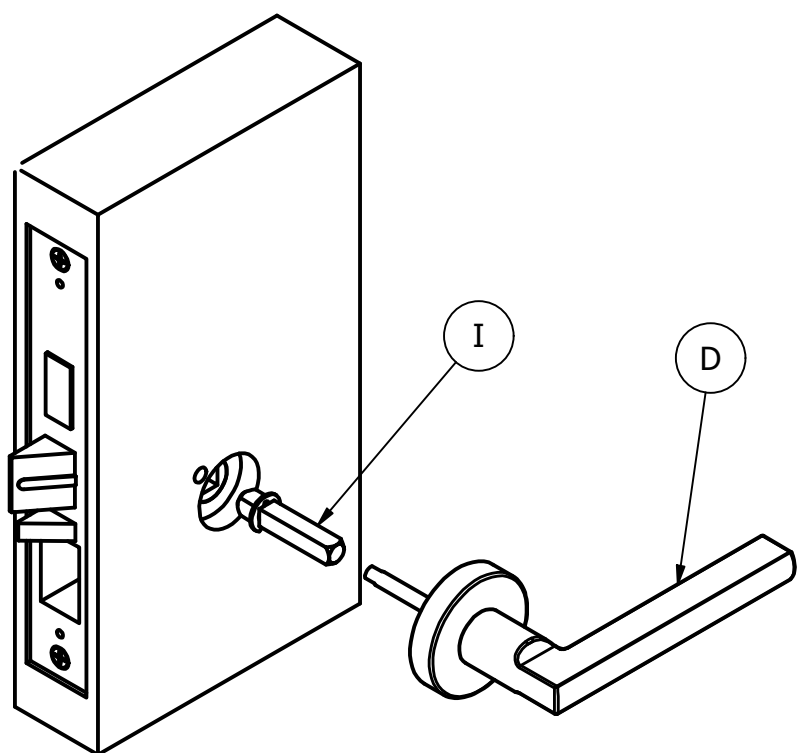


STEP 3)

- A. FROM THE INSIDE OF THE DOOR INSERT SPINDLE (I) INTO THE SPINDLE HUB OF THE LOCK CASE.
- B. ALIGN THE INSIDE MOUNTING BACKPLATE HOLES AND THEN INSERT OVER THE SPINDLE. PUSH AGAINST DOOR FACE.
- C. INSERT THE PROVIDED SCREWS (G) AND FIRMLY FASTEN THE TRIM TO THE DOOR. DO NOT OVER TIGHTEN, THIS MAY DAMAGE OR COMPRESS THE DOOR.

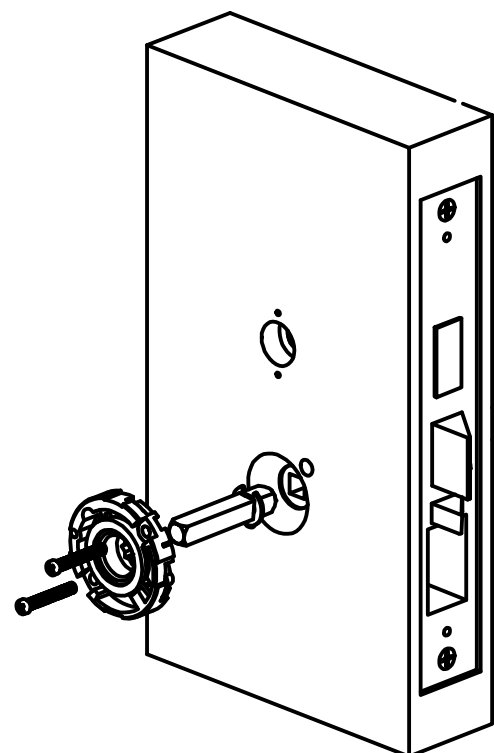


STEP 4)

- A. REFER TO IT-379 CONCEALED FASTENER TURN KNOB INSTALLATION ON HOW TO INSTALL THE TURN KNOB.
- B. FROM THE INSIDE, ALIGN THE TURN KNOB (L) SO THAT IT IS VERTICAL. INSERT THE SPINDLE INTO THE TURN KNOB HUB, THEN SLOWLY THREAD ON THE TURN KNOB ROSETTE UNTIL IT IS TIGHT.
- C. ALIGN THE INSIDE LEVER/ROSE (I) OVER THE SPINDLE AND PUSH UP AGAINST DOOR SURFACE.

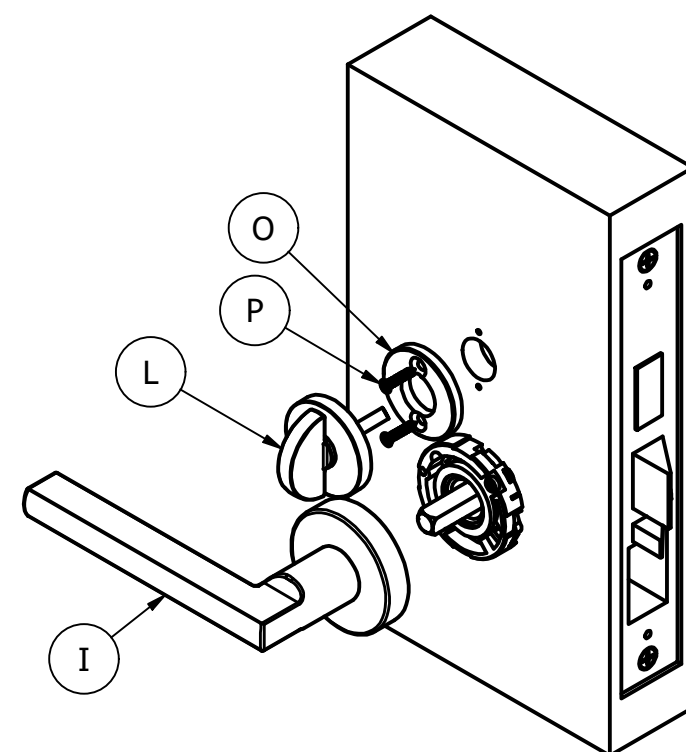


STEP 5)

- A. INSTALL THE PROVIDED STRAP WRENCH OVER THE SM ROSE, THEN TIGHTEN THE STRAP ON THE WRENCH UNTIL IT IS TIGHT AGAINST THE ROSE.
- B. ROTATE CLOCKWISE APPROXIMATELY 15° UNTIL ROSE STOPS. YOU "MAY" HEAR A SLIGHT "CLICK" INDICATING IT IS INSTALLED COMPLETELY.

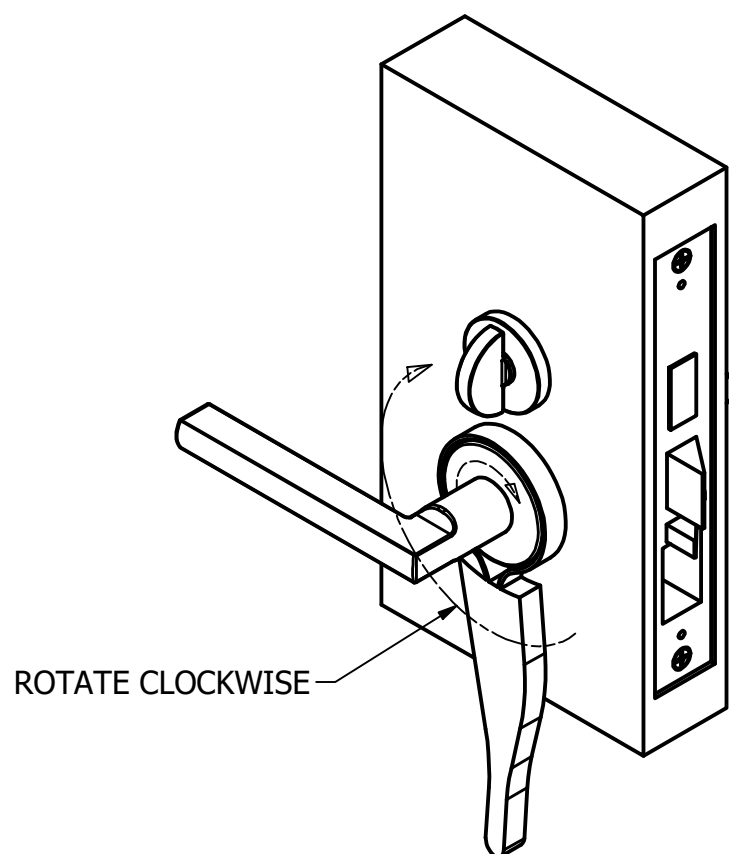

STEP 6)

- A. AFFIX THE LEVERS TO THE SPINDLES BY USING THE PROVIDED HEX WRENCH (K) TO INSERT AND TIGHTEN THE PROVIDED SET SCREWS (H) TO EACH SIDE OF THE DOOR.
- B. TIGHTEN THE MORTISE CASE SCREWS (N).
- C. INSTALL THE FACEPLATE (C) AND INSERT THE 2x FASTENERS (E).

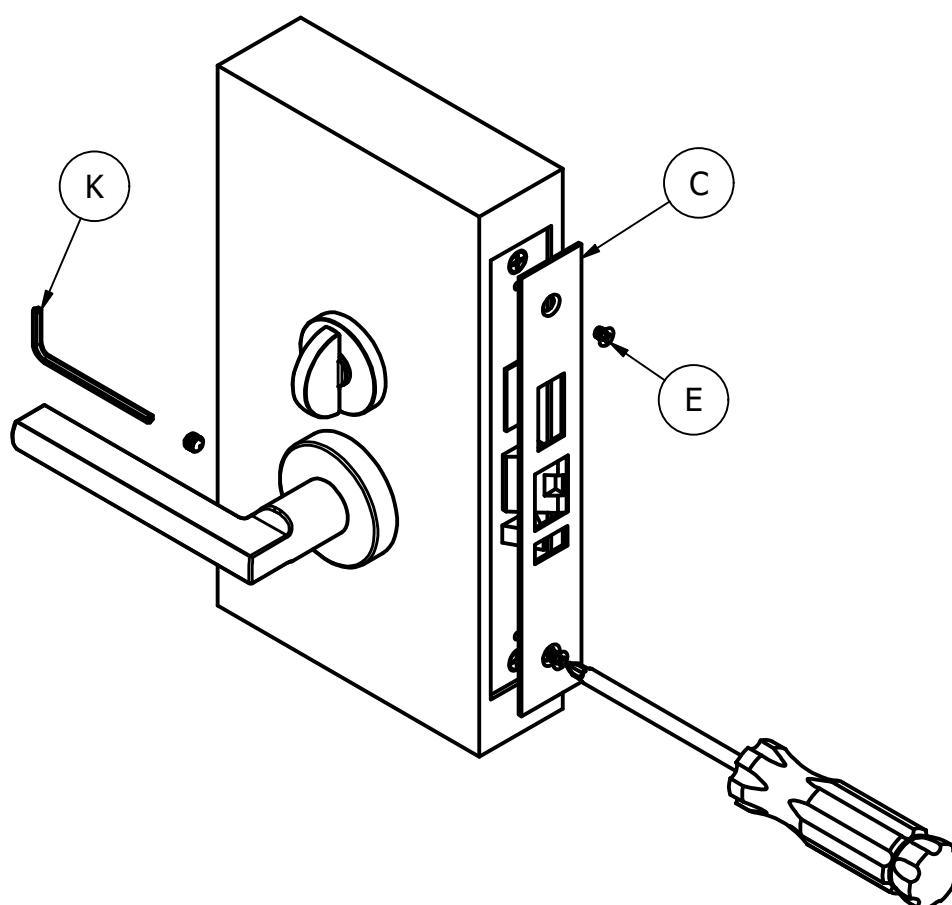

STEP 7)

- A. CHECK FOR NORMAL OPERATION. OPERATE LOCK BY EXTENDING THE DEADBOLT AND OPERATING THE LEVERS. LOCK AND/OR TRIM MAY NEED TO BE ADJUSTED IF LOCK DOES NOT OPERATE AS INTENDED.

