NOTES:
1) NOT TO SCALE. DO NOT USE AS A DOOR TEMPLATE.
2) REFER TO DP-156 FOR STRIKE PREPARATION GUIDE.
3) SLIGHT MODIFICATION MAY BE NECESSARY FOR PROPER FIT.
4) SHOWN, RIGHT HAND DOOR PREP.
5) SPECIFIC CTC DIMENSIONS (mm) FOR ESCUTCHEON PLATES:

	DIM "A"	DIM "B"
11010 PLATE:	203.30	65.43
12010 PLATE:	203.30	64.45
17010 PLATE:	203.30	50.85
18010 PLATE:	215.70	70.05
18020 PLATE:	215.70	70.05

6) REFER TO DP-328 FOR HOLE REQUIREMENTS.
7) FOR ALL ESCUTCHEON PLATES AND SMALL FORMAT SECTIONAL TRIM OPTIONS: SM, SMT, SMG, SMCT, SME, SMQ, SMQR, SMQC, SMO, SMQE.

--NOT TO SCALE--
DO NOT USE AS A DOOR TEMPLATE

Description:
M500 DOOR PREP GUIDE, SM ROSES OR ESCUTCHEONS, 1919 BACKPLATE SPRING SYSTEM (RIGHT HAND SHOWN)

FR International™ 1011 3rd Avenue S.W. Carmel, IN. 46032

TOLERANCES UNLESS OTHERWISE SPECIFIED:
X.X (METRIC)= ±0.5
X.XX(METRIC)= ±0.15
0.00"(UNIFIED)= ±.015"
0.000"(UNIFIED)= ±.005"

Drawing No:	DP-202		
Drawn By:	JWB		
Orig.Date	9-28-15		
Rev. Date:	11-22-24 JDK	Rev.:	H

--NOT TO SCALE--
DO NOT USE AS A DOOR TEMPLATE

INSIDE

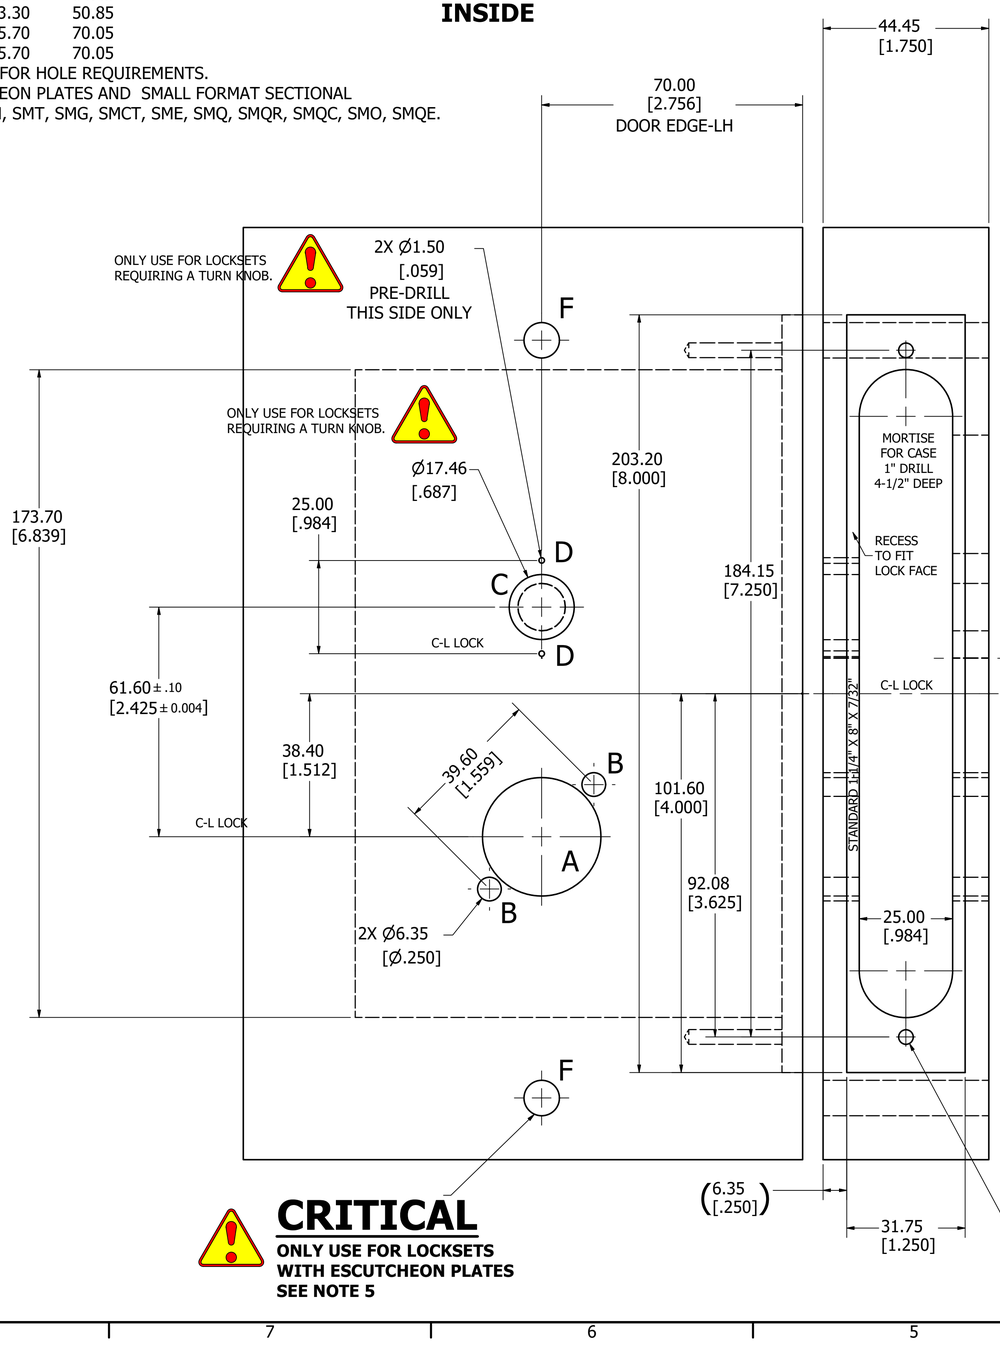

OUTSIDE

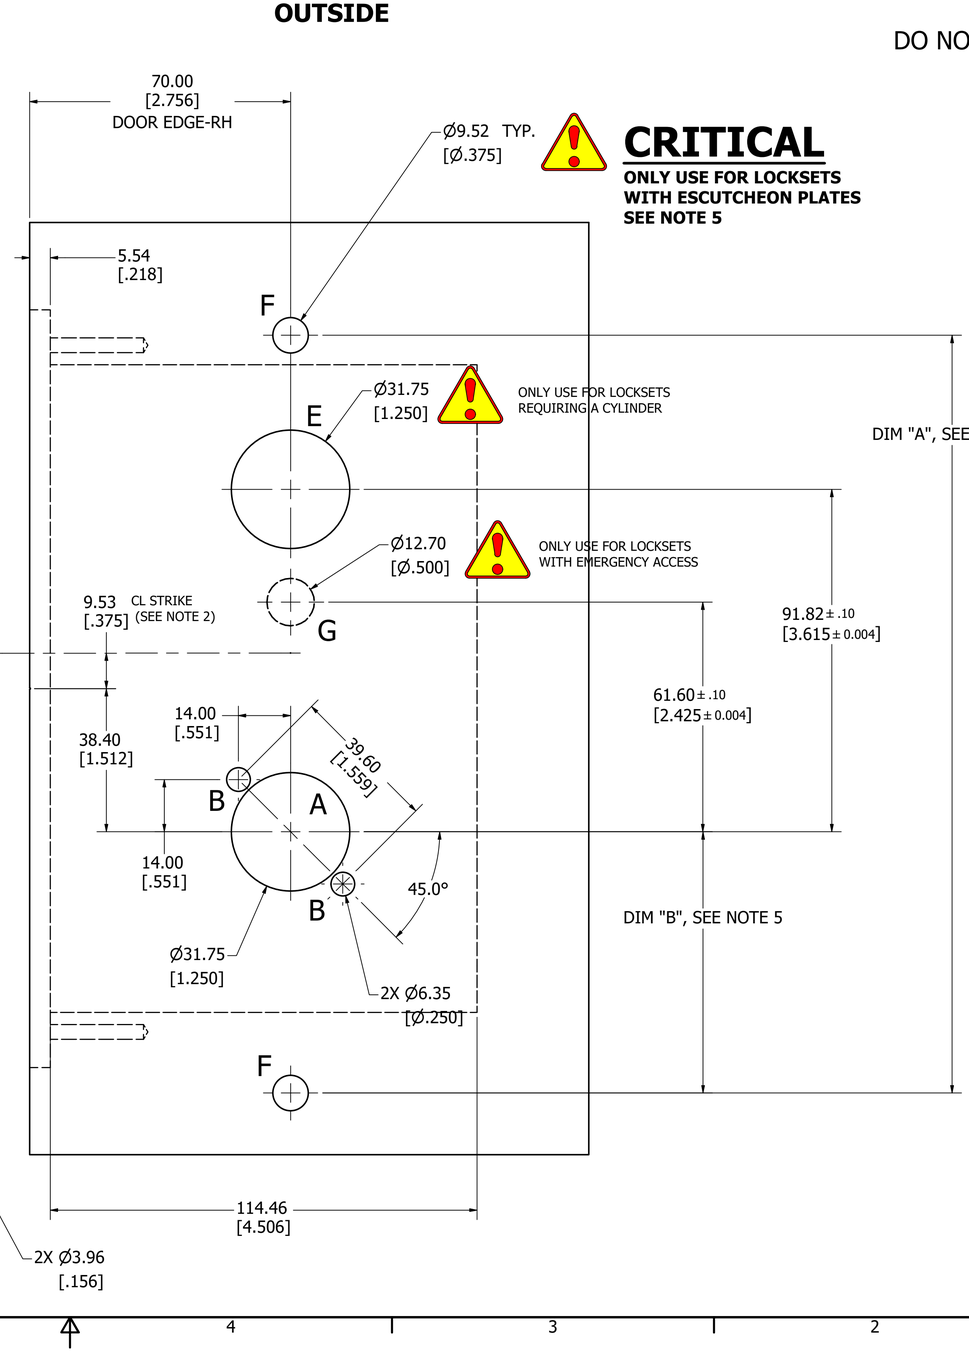

CRITICAL
ONLY USE FOR LOCKSETS WITH ESCUTCHEON PLATES SEE NOTE 5