PARTS LIST:
1) EP6 EDGE PULL
2) EP6 FACEPLATE
3) EP6 FASTENERS, FACEPLATE
4) RC-2 INSIDE TRIM PLATE
5) RC-2 OUTSIDE TRIM PLATE
6) RC-2 TRIM PLATE FASTENERS

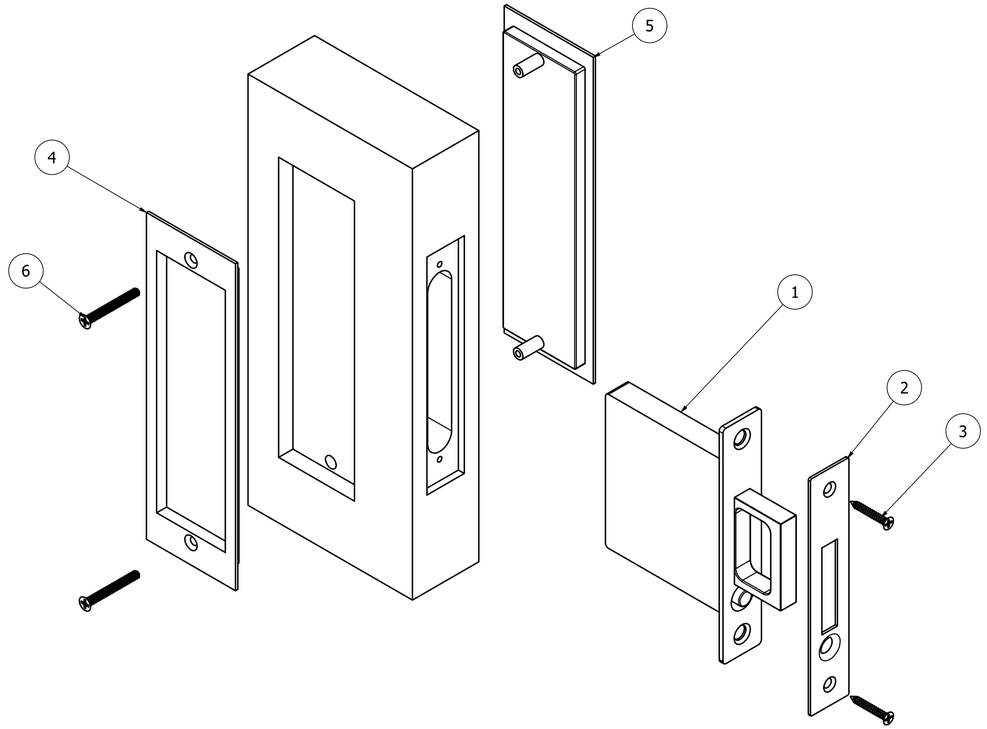

Description:
EP6 x RC-2 INSTALLATION INSTRUCTIONS

FR International™ 1011 3rd Avenue S.W. Carmel, IN. 46032

TOLERANCES UNLESS OTHERWISE SPECIFIED:
X.X (METRIC)= ±0.5
X.XX(METRIC)= ±0.15
0.00"(UNIFIED)= ±.015"
0.000"(UNIFIED)= ±.005"

Drawing No:	IT-417		
Drawn By:	JWB		
Orig.Date	06-12-24		
Rev. Date:		Rev.:	

STEP 1)
1. PREPARE DOOR ACCORDING TO DP-417.
2. INSERT THE EP6 EDGE PULL (1) INTO THE PREPARED CAVITY.
3. INSERT THE FACEPLATE (2) ONTO THE EP6 HANDLE MAKING SURE IT IS SEATED FLUSH WITH THE DOOR EDGE SURFACE.
4) INSERT THE 2X FASTENERS (4) INTO THE FACEPLATE.
5) CHECK FOR NORMAL OPERATION.

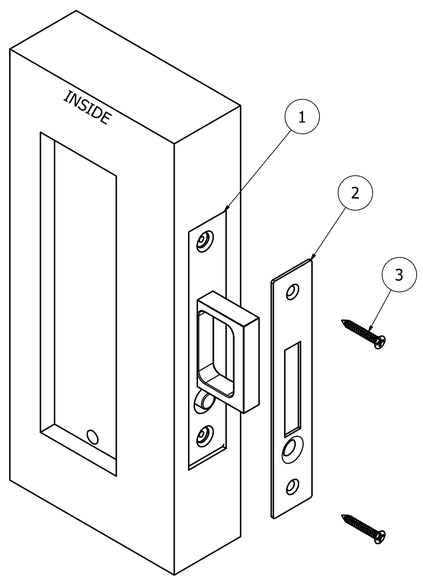
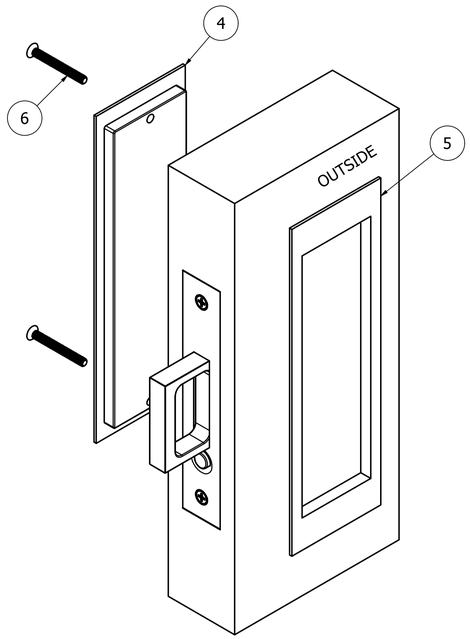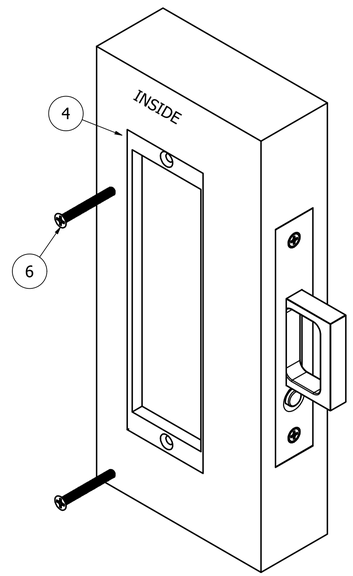
STEP 2)
1. INSERT THE OUTSIDE TRIM (5) INTO THE PREPARED HOLES/CAVITY.
2. INSERT THE INSIDE TRIM (4) INTO THE RECEIVING CAVITY.
3. INSERT THE 2X FASTENERS (6) INTO THE INSIDE TRIM HOLES AND ALIGN WITH OUTSIDE TRIM POST. TIGHTEN FASTENERS FIRMLY.
5. CHECK FOR NORMAL OPERATION.